



Manual Preparation is as easy as


To prepare ThermaFreeze for use, spray or soak in warm water until cells expand to approximately 3/4 inch.

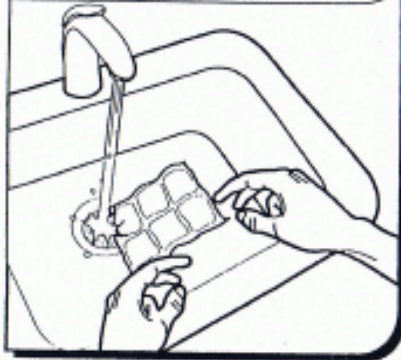

Thoroughly wipe dry with a paper towel or dry cloth to avoid water freezing on the outside of the product.

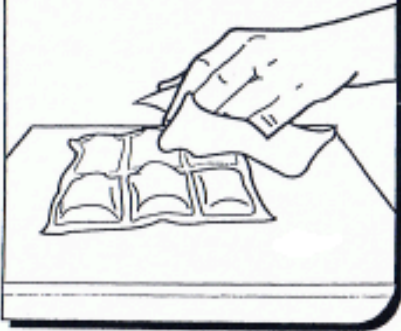

Finally, place sheet in freezer with cloth side up until frozen.

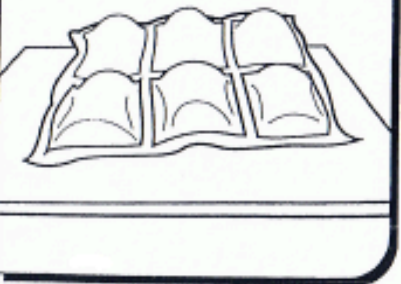

ThermaFreeze™ Refrigerant

Manual for Preparation & Use of Product.

ThermaFreeze Products Corporation offers an environmentally efficient and low cost alternative to ice-substitutes with its patented technology.

Guidelines for using Thermafreeze as follows:

Example: in a Styropack 847 poly box (with internal dims of 51x41x23 and external dims of 59x49x30) we would use approximately 10 sheets to maintain a Chilled environment and approximately 16 sheets for a Frozen product - this will obviously depend on the product.

The sheets should surround the product on all sides – and in the middle if possible. This will only MAINTAIN temperature – so the goods need to be at the correct temperature to start with. The box must then be taped up as airtight as possible.

ThermaFreeze complies with FDA guideline 21 CFR with respect to direct contact with food. Independant lab results available upon request.
Manufactured Under issued United States Patent 5,628,845 and 6,269,654

Caution:

Thermafreeze Product Corporation is not responsible for personal injury from the misuse of this product.

KEEP OUT OF REACH OF YOUNG CHILDREN. DO NOT EAT.